### 1 Introduction

This device is a WiFi based Touch Key Access Controller & REID Reader. User can install the mobile app (ZSmart) to easily access the door with their mobile phones. The app supports up to 500 mobile users, and can manage a maximum of 1000 users (Figerprint/PIN/Card) through the app.

# **2 APP Operation**

Here are just a few steps to get you started.

1) Free APP Downloading


Search ZSmart on Google Play or APP Strore.



2) Make sure WiFi works on your mobile phone.

# **3 Register and Login**

Make sure the registered email is legal and valid, so that you can recover vour password if forgotten.

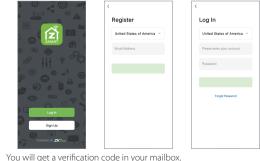


### 4 Add Device

1. Click [Add Device] or 🕣 icon on the Home interface to add a new decive.

**Note:** It is suggested to turn on the Bluetooth, as it makes it easier to find and add the device more auickly.

- 2. Add the scanned device, and input the WiFi password.
- 3. After the device is successfully added, data is automatically synchronized.

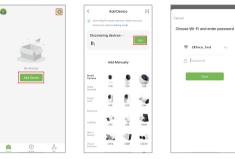



Note: To better manage the devices and family members, you will need to create a home before you begin to manage the device.

Click [Me] > [Home Management] > [Create a home] to create a home.



# **5 Authority**

Note: The first account to add the device is home owner.

Authority	Home Owner (Super Master)	Administrator	Ordinary Member
Open the Door	0	0	0
Member Management	0	0	×
User Management	0	0	×
Set Users as Admin	0	×	×
View All Records	0	0	×
Set Relay Time	0	0	×

Due to the regular upgrades of systems and products. We could not guarantee exact consistency between the actual product and the written information in this manual.

User Manual

WIFI Access Control

Version: 1.0


# **6 User Management**

### 6.1 Add Members

1. Click the device on the **Home** interface to enter the manage interface.

### 2. Click [Member manage].

3. Click [+] on the upper right corner of the interface to add a new member

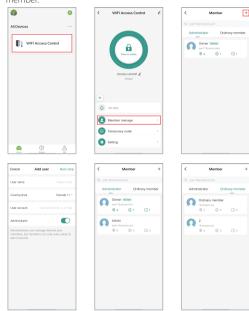


**Note:** When adding members, the Owner (Super Master) can decide to add the user as Administrator or ordinary member.

### 6.2 Manage Members

Owner (Super Master) can decide effective time (Permanent or Limited) of the members

- 1. Choose a member and click on the **Member** interface.
- 2. Click [Effective time].
- 3. Choose "Customize", and then you can set the effective date and time.

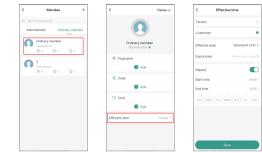

### 6.3 Delete Members

- 1. Choose a member and click on the **Member** interface.
- 2. Click [Delete user] on the upper right corner of the interface to delete this member.

Delete u--




### 6.4 Add Fingerprint/Code/Card Users

Cancel

Code name

You can add or delete fingerprint, code, and card for the users.

- 1. Choose a member and click on the **Member** interface.
- 2. Click [+Add], and then add fingerprints/code/card as instructed.
- 3. Click a fingerprint (code/card) to enter the manage interface, click [Delete Fingerprint] ([Delete Code]/[Delete Card]) to delete

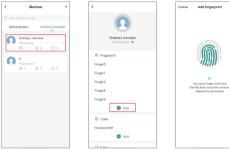



# **Simplified Instruction**



Register & Login

Register

Added successfully





United States of America ...

Search Device &

Configure WiFi Theo, lot



Add Device & Open the Door



B Menker manage

Torque ary code

O Setting

Log In

United States of America

Forget Pressword



All Devices

-

7 Temporary Code

- 1. Click the device on the **Home** interface to enter the manage interface. 2. Click [Temporary code].
- 3. Select "Cyclicity", input the temporary code and set the date and time, and click [Save].
- 4. Click [Share] to share the code, and click [Done] to finish.

٨	0	< WIFI Access Control	۷	< Add tempor	rary co… Log rec…		
All Devices				Code type Cyclicity Once Please input 6 digitals code	Cyclicity Once		
L				987654	Randomly generated		
		Access controll Z		Effective date	2023/06/07 14:34 >		
				Expiry date	2023/06/23 14:34 >		
		۲		Repeat			
		No data		Start time	06:00 >		
		Member manage		End time	20:00 >		
		Temporary code		San Man Tus Was	Thu Fel Sat		
	3	Setting		Saw			




### Once

- 1. Select "Once" and click [Save offline code], then the system automatically generates a random code, which is valid for six hours and can only be used once.
- 2. Click [Share] to share the code, and click [Done] to finish.

< Add tempo	orary co… Log rec…	<	Add temporary com Log recm	4	^	dd temporary ce	
Code type Cyclicity Once	1		9145330438		9	14533043	38
Code name	Peace input		wild the 6 hears and can only be used once Done Share		sald for 4		
					Mail Email	Message	<b>е</b> Сору
valid far 6 hours and c	in only be used ince				More		
Save offi	ne code					Cancel	

### 7.1 Edit/Delete Temporary Code

- 1. Click **[Log record]** on the upper right of add interface.
- 2. Choose the code to be edited and click.
- 3. Click [Edit] to edit the code, click [Delete] to delete this code.

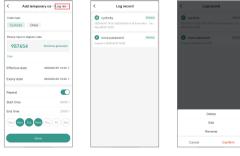

# 8 Setting

1. Click the device on the **Home** interface to enter the manage interface.

#### 2. Click [Setting]. WIFI Access Control Setting Remote unlock setting All Devices Automatic lock Constanting of WIFI Access Control Auto lock time Alarm time Key volume Access centrell Z A No data A Member manage Temporary code •

### Remote unlock setting:

Default is off. When added the device for the first time, it will prompt you to turn it on. Once it is turn off, all the mobile users will not be able to access the lock by app.

### Automatic lock:

Default is on. When it is on, the lock operates in pulse mode. When it is off, the lock switches to latch mode.

### Auto lock time:

Default is 5 seconds. It can be set from 0 to 100 seconds.

### Alarm time:

Default is 3 minutes. It can be set from 1 to 3 minutes.

#### Kev volume:

It can set key volume mute, low, middle and high.

# 9 Log


- 1. Click the device on the **Home** interface to enter the manage interface.
- 2. Click Log icon 🔍 to view the open history and alarms.



# 10 Remove Device & Reset Bluetooth Binding

- 1. Click the device on the **Home** interface to enter the manage interface.
- 2. Click 🖊 on the upper right of the manage interface.

### 3. Click [Remove Device].

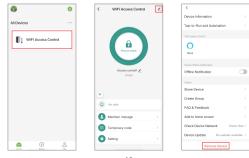

<	
Device Information	
Tap-to-Run and Automation	
0	
Ama	
Offline Notification	
Share Device	
Create Group	
FAQ & Feedback	
Add to home crease	
Disconnect	
Disconnect and wipe data	
Cancel	

#### Note:

- **Disconnect** is just removing the device from the APP. The users' informations (such as fingerprint, code, card) are still retained, (If Owner disconnected, all other members will not be able to access the device.)
- Disconnect and wipe data is unbinding the device and reset Bluetooth, which means the device can be connected by other new users.

### Reset the Bluetooth on the Device

Press \*  $\rightarrow$  Master Code (default is 123456)  $\rightarrow$  #  $\rightarrow$  9  $\rightarrow$  Master Code  $\rightarrow$  #. **Note:** For more information, please refer to the relevant user manual.

\* All the verification mode in this manual are for reference only, please refer to the actual purchase.

